

Virtual Pinball Machine

(WSA – VP01)



Before using this equipment please must understand all buttons function, see below picture explanation :



(1) How to Turn on the machine ?

Answer : Just simply plug in, turn on the button located on the rear door. It will take 30 seconds for loading.

(2) How to Select a game ?

Answer : Please see above pinball button explanation, use button to select the game.

(3) How to Play the game ?

Answer : Use front door left button to select a game, then press the **“Start the game”** button to start the game, then press **“free play button”** or **“Insert coins”** to get coins, and then use plunger to Launch the ball, and then use both side flipper button to flip the ball.

(4) How to program the coin mechanism to use our local coins ?

Answer : Please see below picture instruction :



1) If put \$1 coin in this place, then the coin acceptor can accept \$1 coin.

2) If put \$2 coin in this place, then the coin acceptor can accept \$2 coin.

(5) How to Adjust the volume ?

Answer : Use the key to open the front coin door, and then you can access to the Amplifier to adjust the sound, please see below picture :



(6) How to Exit the game when playing ?

Answer : Press “Exit the game” button, the system will bring you back to main menu.

(7) Is it Safely to turn off the machine directly ?

Answer : Make sure you exit the game and back to main menu, then it is safe to turn off the machine directly.

Note : All Pinball FX2 and Pinball FX3 games are all free play games.

Thank you and Enjoy the games !!